


## Red Diamond™ 620s Glass OLED Science Kit Product Data Sheet

Version 4

Organic light emitting diodes (OLEDs) is one example of the next generation of electronics that comes under the heading of Printed Electronics.

This organic light emitting diode (OLED) science kit enables businesses and educators to manufacture working proof-of-principle OLEDs. Users can experiment with OLED chemistry, physical structures and control electronics.

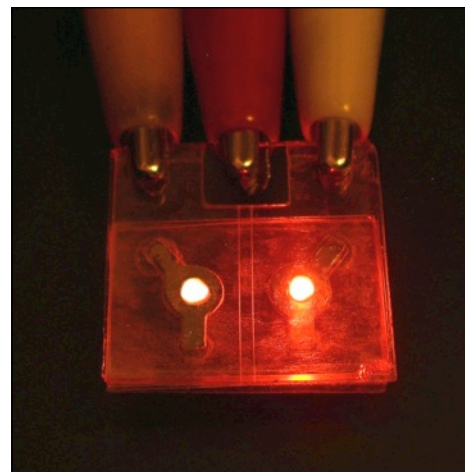

### Benefits Of OLED Science Kit

1. Make working OLED device in under one hour
2. No expensive, specialist equipment necessary
3. Does not require an ultra-clean environment
4. Experiment with OLED device structure
5. Demonstrate properties of OLED's individual layers
6. Evaluate control electronics
7. Technical support to get kit working and to develop applications

### How The OLED Science Kit Works

OLEDs are multi-layered light emissive devices that operate of a low applied voltage, typically 3-12Vdc. In an OLED's simplest form it is three layer and their most complex, there are five, or more layers.

The OLED in this kit is a four layer device: anode, hole transport layer (HTL), Red Diamond™ emissive layer, cathode. The layers are sandwiched between a plastic substrate and an encapsulation layer. Oxygen and water vapour will slowly migrate through the substrate, degrading the device's performance.

The anode is indium tin oxide (ITO), that has been pre-deposited onto a PET plastic substrate. The HTL and emissive layers are spin-coated onto the ITO. By altering the spin-coating speed, the thickness of the layers can be altered from 100-500nm. On top of the emissive layer, the cathode is deposited. There are few choices available for the cathode, since it must be a material with a low work-function. A cathode metal in liquid form is provided in the kit.

Once made, the OLED device will work instantly. The better the manufacturing quality control is (cleanliness), the better the device will be and the longer it will last.

## OLED Science Kit Contents

Part	Description
OLED emissive layer fluid	Orange colour light emissive OLED layer
PEDOT:PSS fluid	Dark-blue fluid for OLED hole-transport layer
2 x ITO substrate	Pre-coated indium tin oxide on 25 x 25 mm glass substrate
Cathode liquid metal	Low work function metal alloy for the cathode
2 x Plastic film Insulating layer	Layer to give OLED a 2mm diameter circular shape
2 x Encapsulation set	Five-layered set for cathode alloy and encapsulating OLED
Gloves	To be worn when manufacturing devices
Pipettes	Used to draw the OLED fluids onto the substrate
OLED electronic driver	Advanced OLED driver
Instructions - online PDF	Explanation and instruction manual for OLED manufacture
MSDS - online PDFs	Material safety data sheets - read before using OLED Science Kit

## Possible Investigations Using The OLED Science Kit

1. Vary the spin coater speed to observe the effect on the OLED
2. Omit the HTL layer to make a simpler OLED
3. Make different sized OLEDs
4. Measure the power per unit area of OLED
5. Compare OLED versus LED technologies:
  - A. Power
  - B. Emissive bandwidth
  - C. Light intensity
  - D. Viewing angle

Note: Polymertronics reserves the right to amend this product's specification and/or look of the product without updating this data sheet, or any other promotional information.

# POLYMERTRONICS

## Polymertronics' Expertise

Polymertronics' products are designed to be out-of-the-box and simple to use. The product range is for businesses and educators who want to understand OLED technology and to develop products for market:

1. Flexible, rigid and inkjet printable OLED Science Kits for experimenting with OLEDs
2. Ultraviolet curing expertise and equipment for printable electronics
3. Electronic drivers for optimizing OLED performance
4. Solid state lighting development products and expertise
5. Full product development capability for applications
6. *Center-Point* for finding resources and answers to queries

## Polymertronics Contact Details

Polymertronics  
Bloxham Mill Business Centre  
Barford Road  
Bloxham  
Banbury  
Oxfordshire  
OX15 4FF  
United Kingdom

Telephone: +44 (0)1295 722 849  
Email: [mail@polymertronics.com](mailto:mail@polymertronics.com)  
Website: [www.polymertronics.com](http://www.polymertronics.com)



The Institution of Engineering and Technology  
Polymertronics is a business partner of the IET technology community



Note<sub>1</sub> : Polymertronics reserves the right to amend this product's specification and/or look of the product without updating this data sheet.

Note<sub>2</sub> : Polymertronics is a subsidiary of E<sup>2</sup>M Technology Limited, United Kingdom.

[www.polymertronics.com](http://www.polymertronics.com)